 



LifeCall[®]

The most important **call** you'll ever make

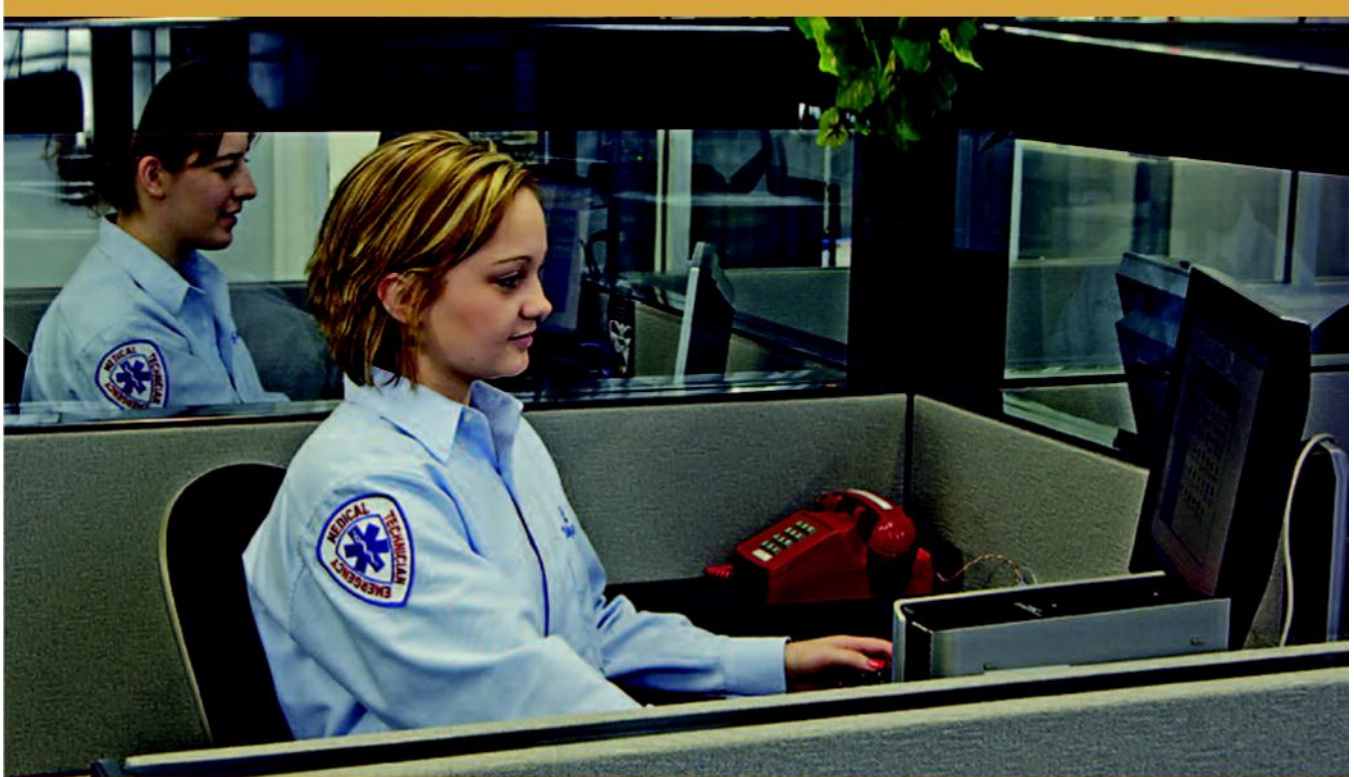





Quick guide for easy set-up
of around-the-clock
personal safety monitoring
by the **LifeCall** Response Center.

 Key controls and indicators are identified here. Your console and transmitter are already programmed and ready to use. A battery inside the console provides up to five days of back-up power.

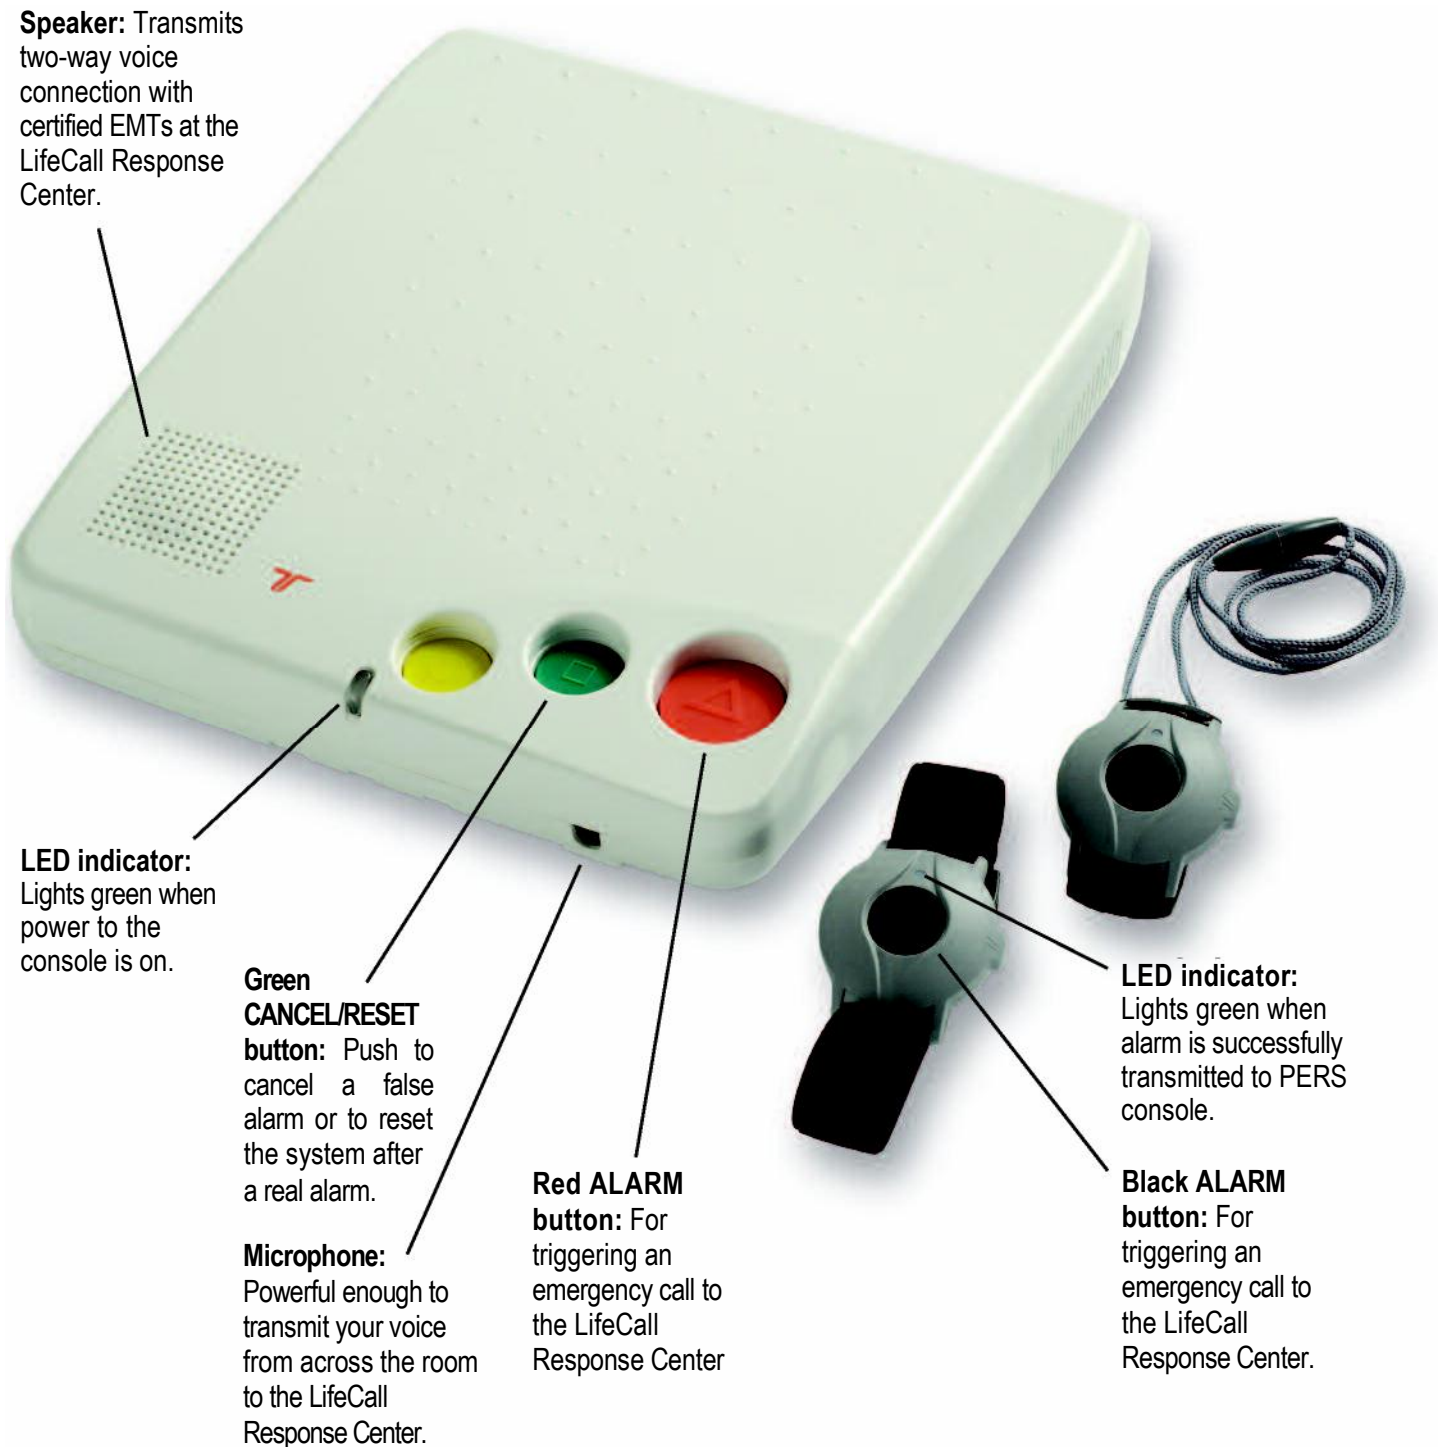



Instructions for **Set-up** of the LifeCall Console

    1. Plug the AC power adapter into an electrical outlet and the cord's connector into the console's back panel POWER outlet.
2. Insert the adapter into a nearby telephone jack. Using the telephone cord, connect one end into the adapter (2B) and the other into the console jack marked TELE (2C). The cord of your household telephone can be connected to the other side of the adapter.
3. Turn the ON/OFF switch on the back of the console to ON (always leave it in the OFF position when the power is not plugged in to avoid draining the battery).
4. Test the system by pressing either the red button on the console or the black button on the transmitter. If you are not connected with the LifeCall Response Center, call 1-800-521-0867 for assistance.

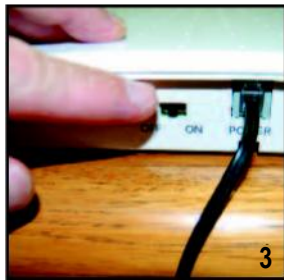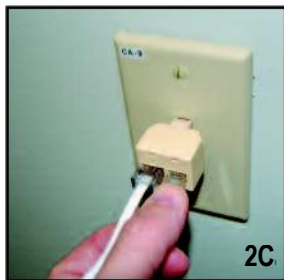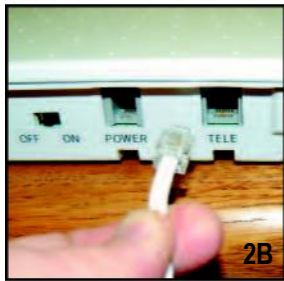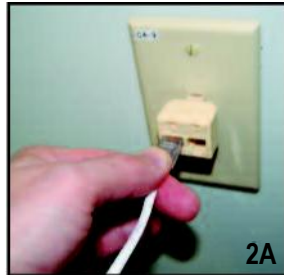

Instructions for **Removal** of the LifeCall Console

  1. Turn the ON/OFF switch on the back of the console to OFF (always leave it in the OFF position when the power is not plugged in to avoid draining the battery).
2. Remove the telephone jack adapter from the telephone jack.
3. Remove the telephone cord from the back of the console jack marked TELE.
4. Unplug the AC power adapter from the electrical outlet and the cord's connector from the console's back panel POWER outlet.

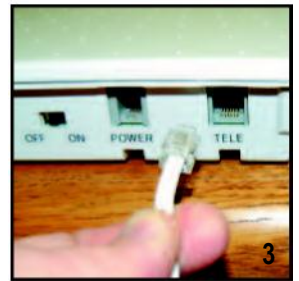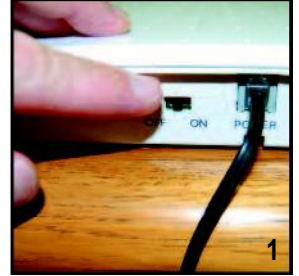

DSL USERS

DSL users must make sure you have a DSL Filter plugged into the phone jack on the wall that you will be plugging the unit into. If you do not have a DSL filter, you can get one from your phone service provider or at Radio Shack



Troubleshooting Guide

LED INDICATOR	PACE ON/OFF (FLASH RATE)	SYSTEM STATUS
Green(with Red Flashes)	On for 1 second and slight Flash	Console Battery Failure . Contact LifeCall
Green	Constantly On	Normal
Green Slow Flash	Green Flash and Off for 1.5 seconds	Power Failure. Check Power Connections. If properly connected and still no power, contact LifeCall.
No Indicator	No Light	Console Power is Off.Turn Console On.
Red Fast Flash	Rapidly Flashing On and Off	Wrist/Pendant Failure. Contact LifeCall
Red Slow Blink	On for 1 second and Off for 1 second	No Phone Line. Check Telephone Line for proper connections. If you do not have dial tone contact LifeCall.
Red Slow Flash	Red Flash and off for 1.5 seconds	Power failure and low Battery. Call LifeCall